

10941 Antihopping clutch kit mounting instructions

Congratulation, you bought one of the best clutch systems.


Everytime is better when this operation do a experienced Ducati service, or Ducati mechanic.

1. Check if the kit includes all parts
2. Remount the old clutch, clean all threads (M8 and on the shaft) from old glue perfectly, bolts and holes too. Clean this parts with brake cleaner.
3. Mount new clutch basket, torque moment for M8 bolts is 30 - 34 Nm, use Loctite No. 510 for safe the bolts.
4. Remove O-ring from STD spacer and install to gearshaft. Replace old spacer with the new kit one, then install spring washer
5. Check, if the steel balls are in their pockets. Use two clutch springs and upside down mounted upper cups to pre-mount both parts of clutch drum together.
6. This unit install to gearbox shaft.
7. The kit includes all accesories, which is necessary to mount. Mount spring washer d 25.mm, then spider-spring, then the main nut . Torque moment 180-190 Nm, use glue Loctite No. 262 to safe.
8. Remove the two springs with caps.
9. Install clutch plates . This kit is designed for sintermetal plates set (code 10909), the factory ones are identical. The set includes 9 pcs. friction, 5 pcs. 1,5mm steel and 4 pcs. steel bombing plates. Watch the signing on bombing plate on picture. Instal them according the picture. The correct totaly thickness of friction plates set is 22.0 mm. In case you mount different plates, you have to hold this thicknes. When the plates has already 21.5 mm and less, replace one 1,5 mm steel plate with 2,0 mm one. If the sthicknes is 21.0, replace 2 pcs of 1,5 mm plates with 2,0 mm plates. In case of less than 21.0mm replace all friction plates.
CAUTION! By clutch model 2014 is on pressure plate already fixed steel ring (pic. 10904B). In case of using this model DON'T put the last steel clutch plate (by pressure plate).
10. Mount the pressure plate. Install clutch springs with kit buckels and STD bolts.
11. Check the clearance between pressure plate and clutch drum in pressure plates hole. The correct clearance is about 1,0 mm. When the clearance is smaller than 0,5mm go back to point No.9. When the clearance is bigger then 1,5mm , you use uncorrect plates.
12. Push clutch lever, rotate with pressure plate and check if the plate rotare with same clearance to plates . In case of problems replace clutch spring in their positions, or install a new ones.
13. Install clutch cover and go back to track.

LIST OF PARTS

- 1 pc. clutch drum lower side
- 1 pc. clutch drum upper side
- 1 pc. clutch basket
- 6 pcs. steel ball
- 1 pc. steel spacer
- 1 pc. small bombing washer
- 1 pc. big bombing washer
- 1 pc. spider spring
- 1 pc. nut
- 6 pcs. spring buckels


10941 Picture A (pic. a)

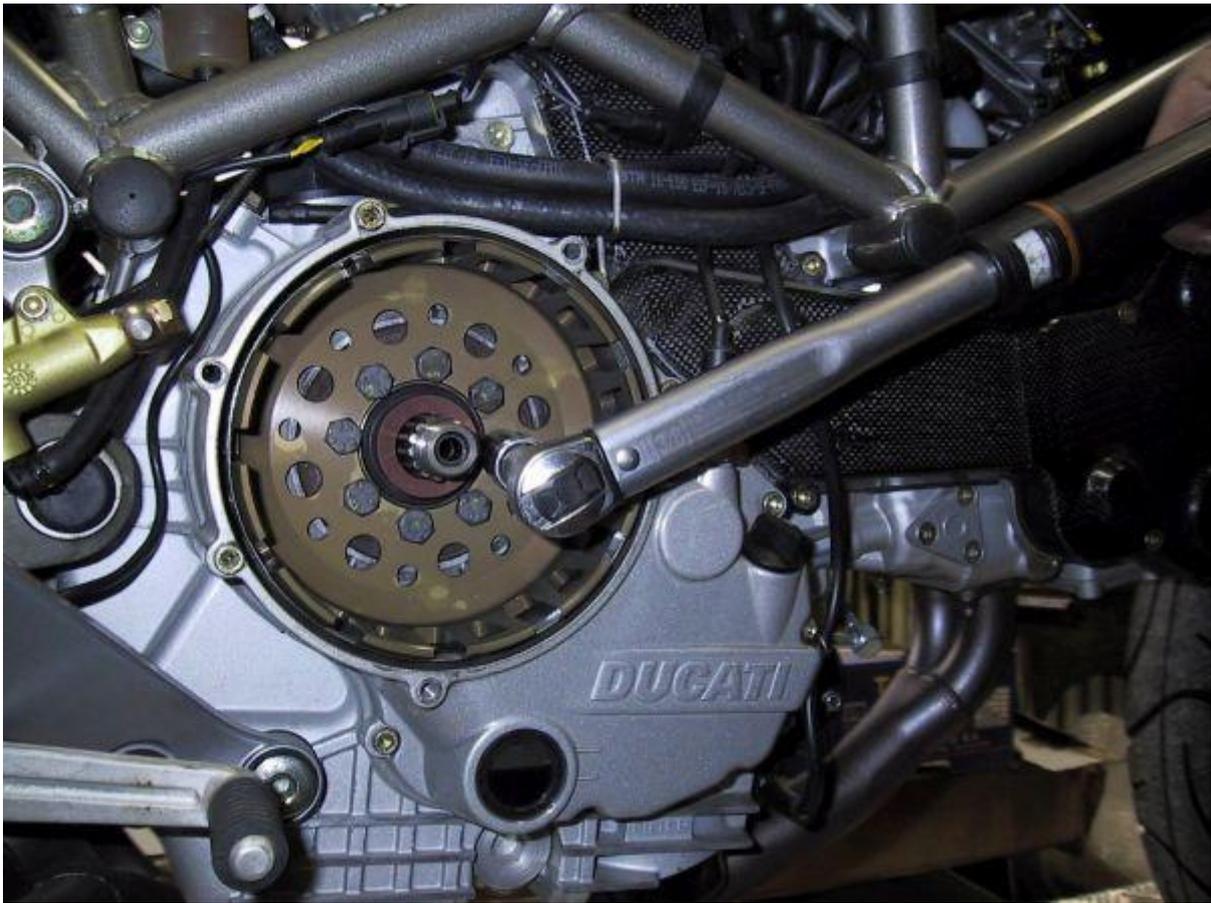


10941 Picture B (pic. b)



10941 Picture C (pic.c)

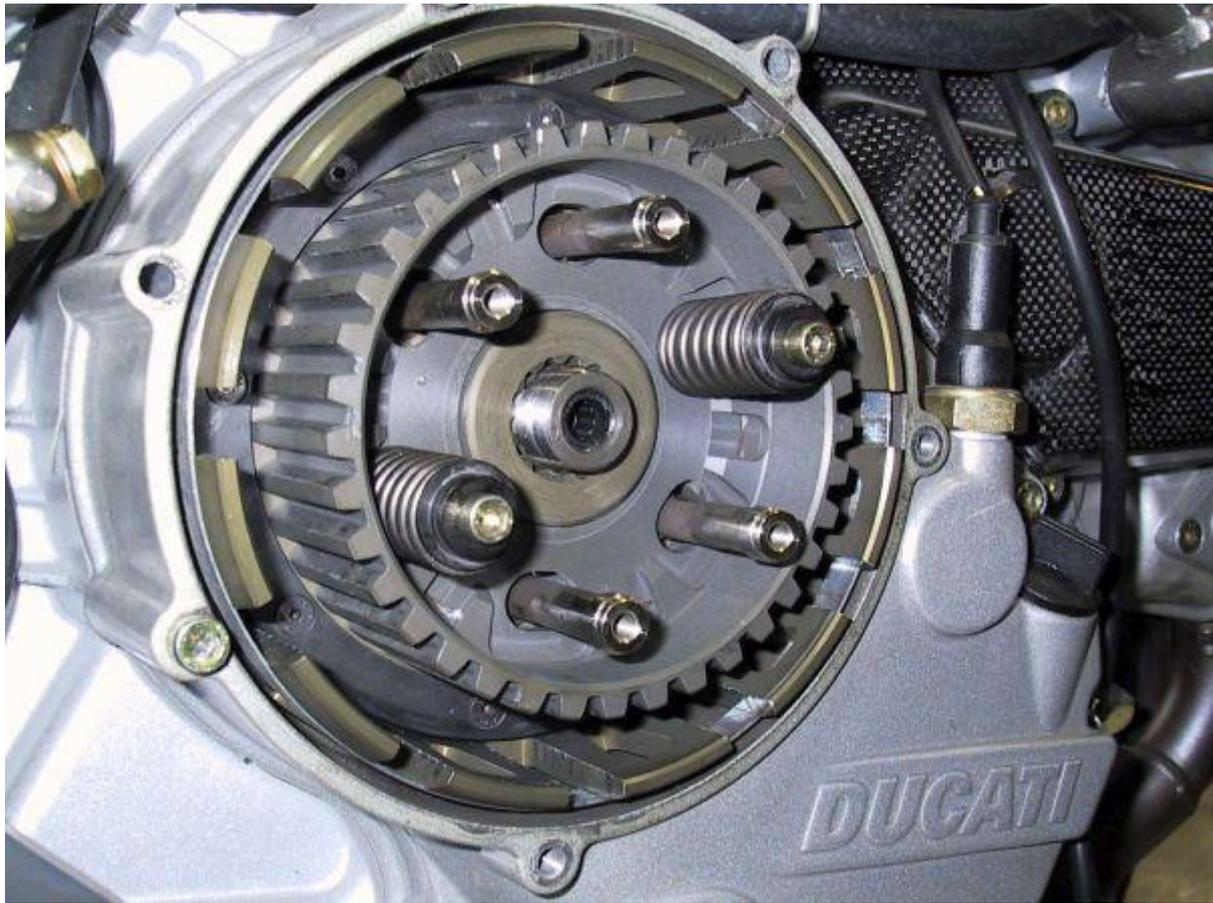


10941 Picture D (pic. d)

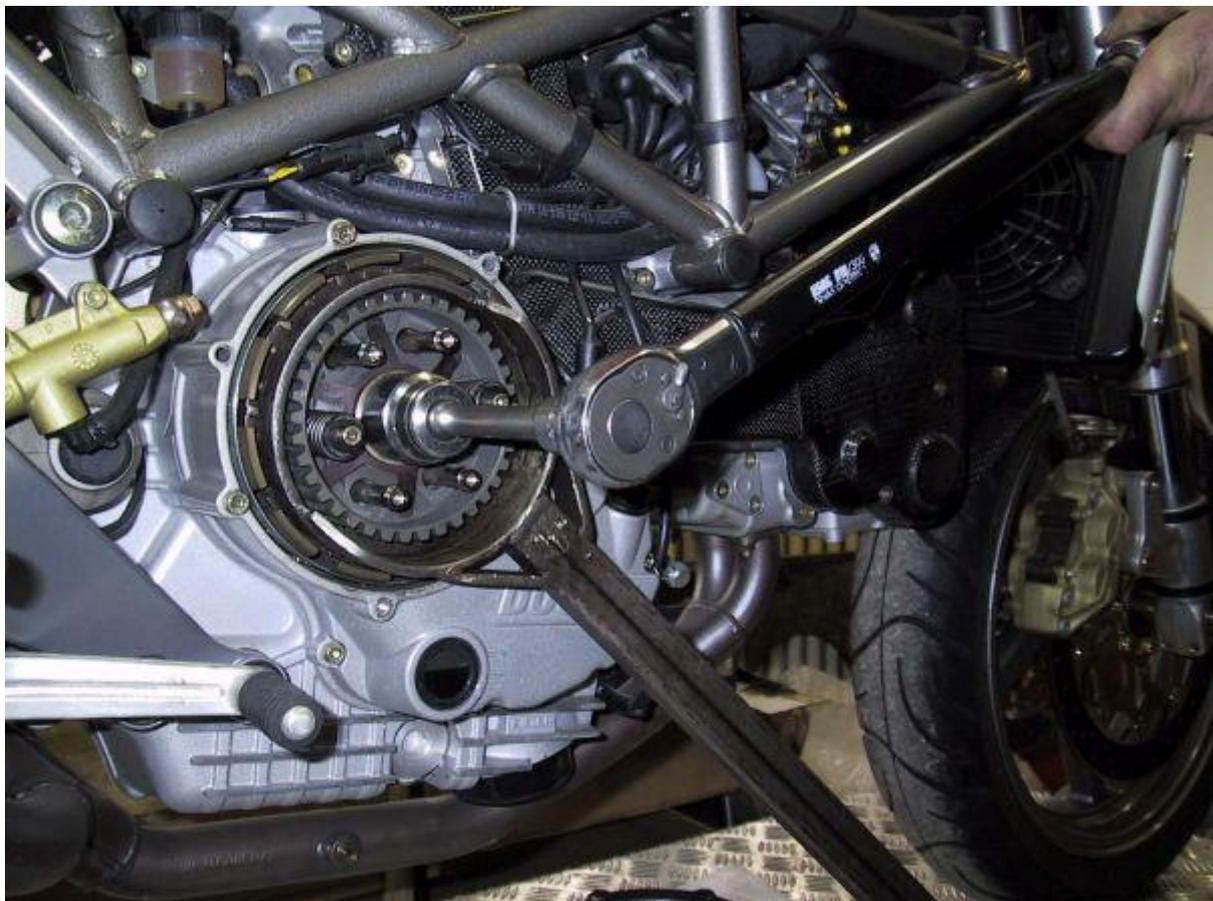


10941 Picture E (pic. e)



10941 Picture F (pic.f)

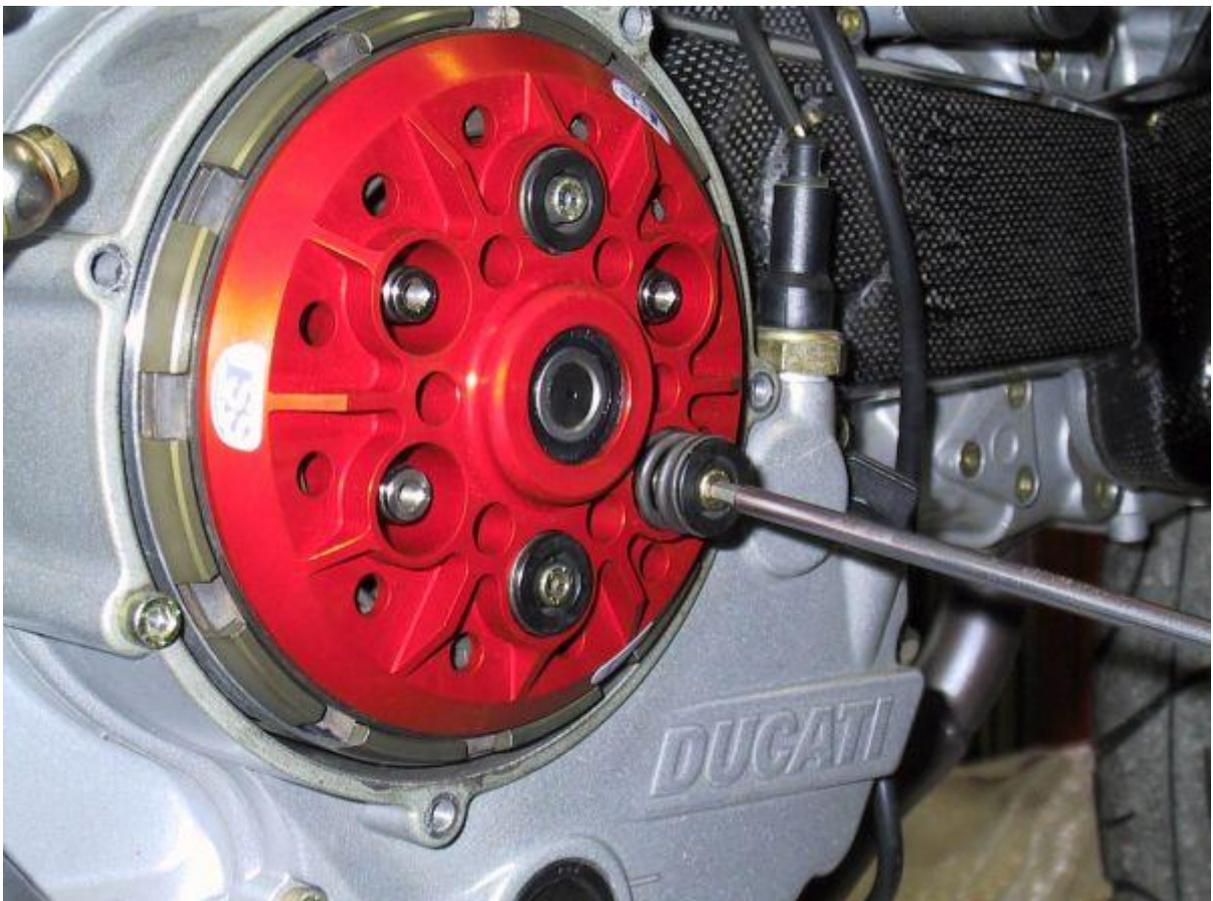

10941 Picture G (pic. g)

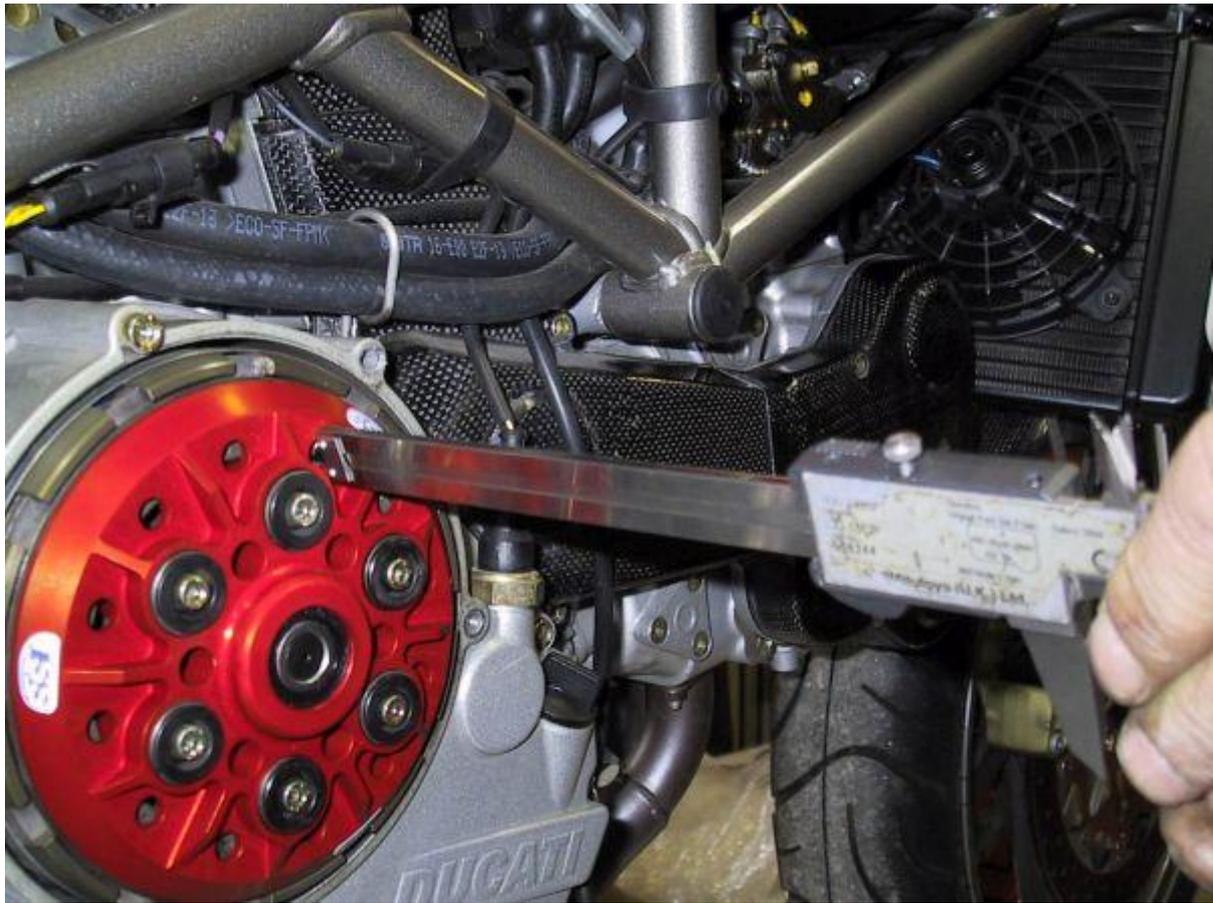

10941 Picture H (pic. h)

